



RJ1231GNW 10/30/2004

**LACETTI <WESTERN EUROPE>
OIL PAN&PUMP(FAM II)**

KEY NO.		PART NAME														OPTION	REMARKS				
I T C	PART NO.	C H G	M Y F	M Y T	D R V	MODEL			L / R	Q T Y	P N C	P / C O D E	EFFECTIVE POINT								
						BODY							LEVEL					VIN1		VIN2	
						4N	4H	5W					I	II	III			FROM	TO	FROM	TO
	1		PUMP A-OIL,ENG																		
Y	90570925		04	05		B	B	B	X	X	X							&L84			
	92067276		04	05		B	B	B	X	X	X							&L84			
	2		SEAL-CR/SHF,FRT																		
	90183572		04	05		B	B	B	X	X	X							&L84			
	3		PLUNGER-PRESSURE RELIEF VALVE																		
	90530592		04	05		B	B	B	X	X	X							&L84			
	4		SPRING-OIL RELIEF																		
	94580015		04	05		B	B	B	X	X	X							&L84			
	5		RING-SEAL																		
	11093042		04	05		B	B	B	X	X	X							&L84			
	6		PLUG																		
	94580013		04	05		B	B	B	X	X	X							&L84	M20x1.5		
	10		SCREW																		
	94580075		04	05		B	B	B	X	X	X							&L84	M6x14		
	11		SEAL-OIL DUCT PLUG																		
	92061013		04	05		B	B	B	X	X	X							&L84			
	12		PLUG																		
Y	11039122		04	05		B	B	B	X	X	X							&L84			
Y	92066521		04	05		B	B	B	X	X	X							&L84			
	13		PIECE-CONN																		
	94580601		04	05		B	B	B	X	X	X							&L84			
	14		VALVE A-BYPASS																		
	94580569		04	05		B	B	B	X	X	X							&L84			
	15		SWITCH A-OIL PRESSURE																		
Y	90336039		04	05		B	B	B	X	X	X							&L84			
Y	96281689		04	05		B	B	B	X	X	X							&L84			
Y	96494264		04	05		B	B	B	X	X	X							&L84			
	16		WASHER																		
	94525114		04	05		B	B	B	X	X	X							&L84	14x20x1.5		
	17		SCREW																		
	11084962		04	05		B	B	B	X	X	X							&L84	M6x1x25		
	18		FILTER A-OIL,ENG																		
Y	96352845		04	05		B	B	B	X	X	X							&L84			
Y	94797406		04	05		B	B	B	X	X	X							&L84			
Y	96458873		04	05		B	B	B	X	X	X							&L84			
	19		GASKET-OIL PUMP																		
	92060519		04	05		B	B	B	X	X	X							&L84			
	20		SLEEVE																		
	94580526		04	05		B	B	B	X	X	X							&L84			
	21		PIPE A-OIL SUCT																		
	92063625		04	05		B	B	B	X	X	X							&L84			
	22		RING-SEAL																		
	94580643		04	05		B	B	B	X	X	X							&L84			
	23		BOLT																		
	94501460		04	05		B	B	B	X	X	X							&L84	M6x1.0x18		
	24		BOLT																		
	11096921		04	05		B	B	B	X	X	X							&L84			
	25		BRIDGE-OIL PAN																		
	90501900		04	05		B	B	B	X	X	X							&L84			
	26		SCRAPER-OIL PAN																		
	92063872		04	05		B	B	B	X	X	X							&L84			
	27		SCREW																		
	11096481		04	05		B	B	B	X	X	X							&L84			
	29		PAN A-OIL,ENG																		
	92065755		04	05		B	B	B	X	X	X							&L84&NN1			
	30		SCREW																		
	92063103		04	05		B	B	B	X	X	X							&L84			
	31		SCREW																		
	11096481		04	05		B	B	B	X	X	X							&L84			
	32		WASHER																		
Y	11023589		04	05		B	B	B	X	X	X							&L84			
Y	94525114		04	05		B	B	B	X	X	X							&L84			
	33		BOLT																		
Y	94500881		04	05		B	B	B	X	X	X							&L84			
Y	94500883		04	05		B	B	B	X	X	X							&L84			
Y	94535699		04	05		B	B	B	X	X	X							&L84			
	35		WASHER																		
	92023395		04	05		B	B	B	X	X	X							&L84			
	36		GEAR-CR/SHF																		
	90411795		04	05		B	B	B	X	X	X							&L84			
	37		SCREW																		
	11085932		04	05		B	B	B	X	X	X							&L84			

