



RJ4330DNW 01/06/2005

LACETTI <WESTERN EUROPE>  
**REAR KNUCKLE&HUB**

KEY NO.			PART NAME														OPTION	REMARKS			
I T C	PART NO.	C H G	MY F	MY T	D R V	MODEL						L / R	Q T Y	P N C	P / C O D E	EFFECTIVE POINT					
						BODY			LEVEL							VIN1			VIN2		
						4N	4H	5W	I	II	III					FROM			TO	FROM	TO
<b>1 KNUCKLE A-RR</b>																					
	96489001	CH	04	05		B	B	.	X	X	X	LH	1			073653					
O	96407220	CH	04	06		B	B	.	X	X	X	LH	1		073654						
	96407220	CH	05	06		.	.	B	X	X	X	LH	1								
	96489002	CH	04	05		B	B	.	X	X	X	RH	1			073653					
O	96407221	CH	04	06		B	B	.	X	X	X	RH	1		073654						
	96407221	CH	05	06		.	.	B	X	X	X	RH	1								
<b>3 HUB UNIT-RR</b>																					
	96328248	CH	04	06		B	B	B	X	X	X		2					&JL9/JTC			
Y	96639607	AD	04	06		B	B	B	X	X	X		2					&JL9/JTC			
<b>7 DISC-BRAKE SOLID,RR</b>																					
	96549630		04	06		B	B	B	X	X	X		2					&JB6			
<b>8 SCREW</b>																					
	94520093		04	06		B	B	B	X	X	X		2								
<b>17 BOLT</b>																					
	94501043	AD	04	06		B	B	B		X	X		8								
<b>18 RUBBER-PROTV</b>																					
	96378942		04	06		B	B	B	X	X	X		2					&JB6			