



RJ4910 10/30/2004

**LACETTI <WESTERN EUROPE>
STEERING GEAR UNIT**

KEY NO.			PART NAME														OPTION	REMARKS			
I T C	PART NO.	C H G	MY F	MY T	D R V	MODEL						L / R	Q T Y	P N C	P / C O D E	EFFECTIVE POINT					
						BODY			LEVEL							VIN1			VIN2		
						4N	4H	5W	I	II	III					FROM			TO	FROM	TO
1 GEAR A-STRG																					
	96451425		04	06	L	B	B	.	X	X	X	1		EL		039617			-UXA		
Y	96451953	CH	04	06	L	B	B	B	X	X	X	1		EC	039618				&N40		
Y	96442387	AD	04	06	L	B	B	B	X	X	X	1		LE					&N40		
	96407342		04	06	L	B	B	.	.	.	X	1		LS		039617			&UXA		
Y	96451961	CH	04	06	L	B	B	B	.	.	X	1		DS	039618				&UXA		
Y	96442385	AD	04	06	L	B	B	B	.	.	X	1		JV					&UXA		
2 BOLT																					
	94501445		04	06		B	B	B	X	X	X	1								&N40/UXA	
3 SHAFT A-INTERM																					
	96550190		04	05	L	B	B	.	X	X	X	1		LJ		903206					
Y	96409535	CH	04	06	L	B	B	B	X	X	X	1		LJ	903207	102812					
Y	96430691	AD	04	06	L	B	B	B	X	X	X	1		MJ	102813						
4 BOLT																					
	94501675		04	06		B	B	B	X	X	X	1									
5 NUT																					
	94515097		04	06		B	B	B	X	X	X	3									
6 BOLT																					
	94500619		04	04		B	B	.	X	X	X	1				903206					
N	94501827		04	06		B	B	B	X	X	X	1			903207						
7 NUT																					
	94515405		04	06		B	B	B	X	X	X	2								&N40/UXA	
9 NUT																					
	94515069		04	06		B	B	B	X	X	X	2								&N40/UXA	
11 BOLT																					
	94500699		04	06		B	B	B	X	X	X	1								&N40/UXA	
Y	94500698	AD	04	06		B	B	B	X	X	X	1								&N40/UXA	
12 BRACKET-HOUSING,STRG GEAR																					
	96321405		04	06		B	B	B	X	X	X	1								&N40/UXA	